

Repair instruction

PRODUCT GROUP [COOKING APPLIANCES]

PRODUCT CATEGORY [HOBS]

PRODUCT CODE : VARIOUS

WARNING! Before commencing work, disconnect the electricity and turn off the gas.

A

These instructions are for Thetford cookers with electric hotplates. For surface-mounted hobs please refer to page 3. Electric hotplates should only be removed and replaced by a qualified competent person.



B

Remove the pan-rest(s) and all the control knobs. Behind the knobs locate and remove the 16/17mm hexagonal nuts from the controls and 2 screws (where applicable).



C

On the back edge of the control fascia, remove the 2 screws.



D

The control fascia and profile can now be removed. Lift up and forward, and carefully remove the spade connections for the ignition button and oven light switch, where fitted.



Repair instruction

PRODUCT GROUP [COOKING APPLIANCES]


PRODUCT CATEGORY [HOBS]

PRODUCT CODE : VARIOUS

WARNING! Before commencing work, disconnect the electricity and turn off the gas.


E

Remove any screws fitted to the rear trim and loosen the 2 screws in each hinge, but do not remove.

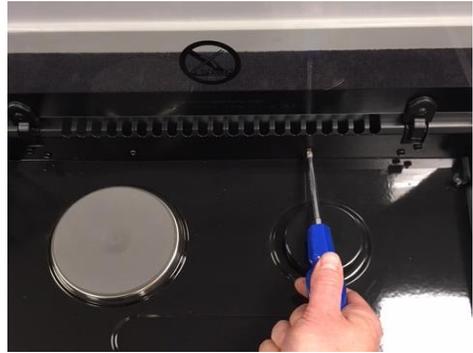

F

In each black enamel burner cap remove the retaining screw(s).

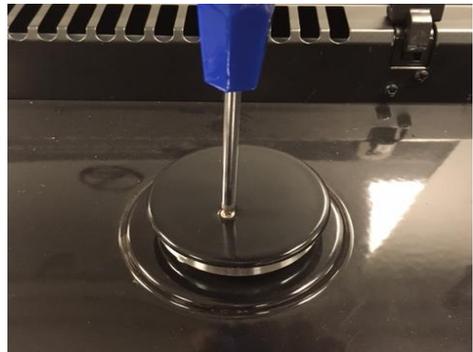

G

The enamel burner caps and cast burner rings can now be removed. Next remove the screws/retaining studs found beneath the burner rings.



H

Finally, if applicable, remove the 2 screws found in the pan-rest clips that are holding the hob pressing in place.



Repair instruction

PRODUCT GROUP [COOKING APPLIANCES]


PRODUCT CATEGORY [HOBS]

PRODUCT CODE : VARIOUS

WARNING! Before commencing work, disconnect the electricity and turn off the gas.


I

The hob pressing can now be raised, giving access to the underside of the hot plate.

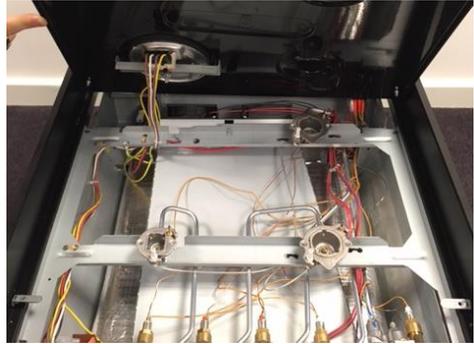

J

Undo the nut holding the earth strap in place, ensuring that you retain the star lock washer.

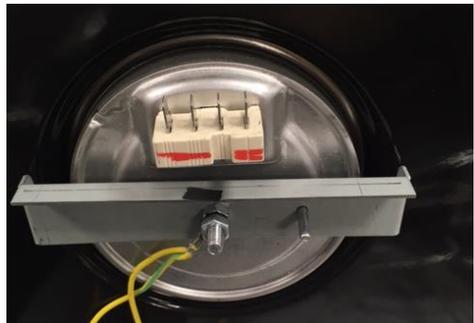

K

Undo the second nut, if the bracket doesn't release remove the screw in the back left corner from the top side of the pressing. The hotplate will now be released to remove from the underside.



L

Take care in removing the hotplate leads. For individual leads take note of the positions of the leads. To reassemble follow these instructions in reverse order, replacing with a new hotplate. The hotplate is a sealed construction and has no user-serviceable components.

