


LE1318_SOH709XX

		Spare part number	Spare part number	Colours available
1	Glass lid (.BK: smoked black clear)	SSPA0235		
	Glass lid (.SBK: solid black)	SSPA0242		
2	Glass lid hinges 2x	SSPA0010		
3	Shut off assy (=incl. nr 8)			
	Production date: < 06-12-2016 (< E340T...)	SSPA0600		
	Production date: ≥ 07-12-2016 (≥ E341T...)	SSPA0603		
4	Pan support	SSPA0961		
5	Pan support clips 4x	SSPA0041		
	Pan support clips 50x	SSPA0042		
6	Burner assy (Large)			
	Production date: < 24-06-2012 (< E175N...)	SSPA0123		
	Production date: ≥ 25-06-2012 (≥ E176N...)	SSPA0813		
7	Burner assy (Medium)			
	Production date: < 24-06-2012 (< E175N...)	SSPA0112		
	Production date: ≥ 25-06-2012 (≥ E176N...)	SSPA0110		
8	Thermocouples hob		For lid shut	
	Front left	SSPA0675	SSPA0671	
	Front right	SSPA0675	SSPA0671	
	Rear Left	n.a.	n.a.	
	Rear Right	SSPA0676	SSPA0670	
	Production date: ≥ 25-06-2012 (≥ E175N...)		For lid shut	
	Front left	SSPA0680	SSPA0685	
	Front right	SSPA0681	SSPA0685	
	Rear Left	n.a.	n.a.	
	Rear Right	SSPA0682	SSPA0684	
	9	Spark electrode 4x		
Production date: < 24-06-2012 (< E175N...)		SSPA0310		
Production date: ≥ 25-06-2012 (≥ E176N...)		SSPA0320		
10	Bump stop 2x	SSPA0040		
11	Gas Tap Oven/grill			
	Production date: < 24-06-2012 (< E175N...)	SSPA0456		
	Production date: ≥ 25-06-2012 (≥ E176N...)	SSPA0457		
	Production date: ≥ 15-10-2017 (≥ E288U...)	SSPA0458		
12	Gas tap burner 1x (Medium)			
	Production date: < 24-06-2012 (< E175N...)	SSPA0432		
	Production date: ≥ 25-06-2012 (≥ E176N...)	SSPA0430		
	Production date: ≥ 15-10-2017 (≥ E288U...)	SSPA0433		
13	Gas tap burner 1x (Large)			
	Production date: < 24-06-2012 (< E175N...)	SSPA0472		
	Production date: ≥ 25-06-2012 (≥ E176N...)	SSPA0470		
	Production date: ≥ 15-10-2017 (≥ E288U...)	SSPA0474		
14	Control knobs	<i>Refer to page 4</i>		
15	Spark ignition switch	SSPA0381		
16	Light switch <i>*not all models</i>	SSPA0560		
17	Oven door seal	SSPA0062		
18	Oven door	<i>Refer to page 5</i>		

		Spare part number	Spare part number	Colours available
19	Glass, inner door	SSPA0253		
20	Oven shelf 1x	SSPA0982		
21	Grill pan	SSPA0993		
22	Oven lamp <i>*not all models</i>	SSPA0562		
23	Spark generator	SSPA0399		
24	Electrode oven	SSPA0626 ≥ 06-12-16 (E340T...)	SSPA0606 < 06-12-16 (E340T...) Modification kit	
25	Thermocouple oven			
26	Thermocouple grill	SSPA0627 ≥ 06-12-16 (E340T...) SSPA0694 ≥ 29-01-24 (E052A...)		
27	Electrode grill			
28	Grill shutoff	SSPA0605		
29	Grill burner			
	Production date: < 26-04-16 (E299S...)	Not available		
	Production date: ≥ 27-04-16 (E299S...)	SSPA0185		
	Production date: ≥ 29-01-24	SSPO1104 SSPA0188		
30	Oven Burner	SSPA0191		

XXXXXX = not available anymore

Control knobs

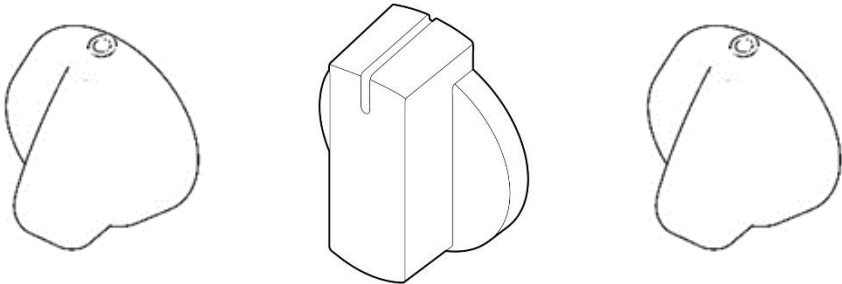

Spare part number	SSPA0939	SSPA0901	SSPA0904
Colours available	Black (.BK) With Marks	Matt Nickel (.MNK) Chrome (.CR) Gloss Nickel (.GNK)	Black (.BK)
Set quantity	4	6	6

Control knobs




Spare part number	SSPA0905	SSPA0936
Colours available	Black (.BK)	Chrome(.CR) Satin (.SA)
Set quantity	6	5

Cladding styles


No cladding



Side cladding

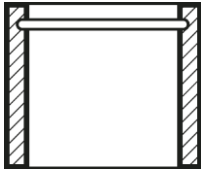


Behind handle cladding

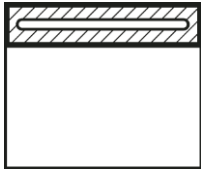









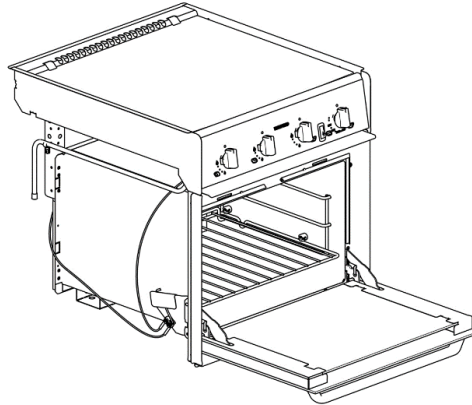



Oven door styles

Drop down oven door



Drop down oven doors

Spare part number	Glass	Print	Cladding	Cladding position	Handle style	Handle colour
SMAO3435.BK/SVS1X	Clear	Black	No	N/A		Stainless
SMAO3435.BK1X	Clear	Black	No	N/A		Stainless
SMAO3435.BK5X	Clear	Black	Yes	Sides		Stainless
SMAO3435.BK14X	Clear	Black	Yes	Sides		Brushed Nickel
SMAO3435.BK16X	Clear	Black	No	N/A		Chrome
SMAO3435.BK19X	Clear	Black	Yes	N/A		Stainless
SMAO3435.BK20X	Clear	Black	No	N/A		Black
SMAO3435.BK21X	Clear	Black	Yes	Sides		Brushed Nickel
SMAO3435.BK22X	Clear	Black	No	N/A		Chrome
SMAO3435.BK23X	Clear	Black	No	N/A		BNK
SMAO3435.BK24X	Clear	Black	Yes	Sides		Chrome
SMAO3435.MIR6X	Mirror	N/A	No	N/A		Brushed Nickel

~~xxxxxx~~ = not available anymore